

# 像真机安装说明

## Instruction for scale cabin installation


**E SKY**®




8. 把尾箱和拉杆套上 <注意: 要先把尾摆臂前一个孔剪掉, 然后把拉杆装进尾摆臂第二个孔位>  
Install the tail box and push link. (Remarks: Scissor the front hole of the tail control arm firstly, then insert the push link into the second the hole.)




9. 用十字螺丝刀锁住  
Lock them by crossing screwdriver.

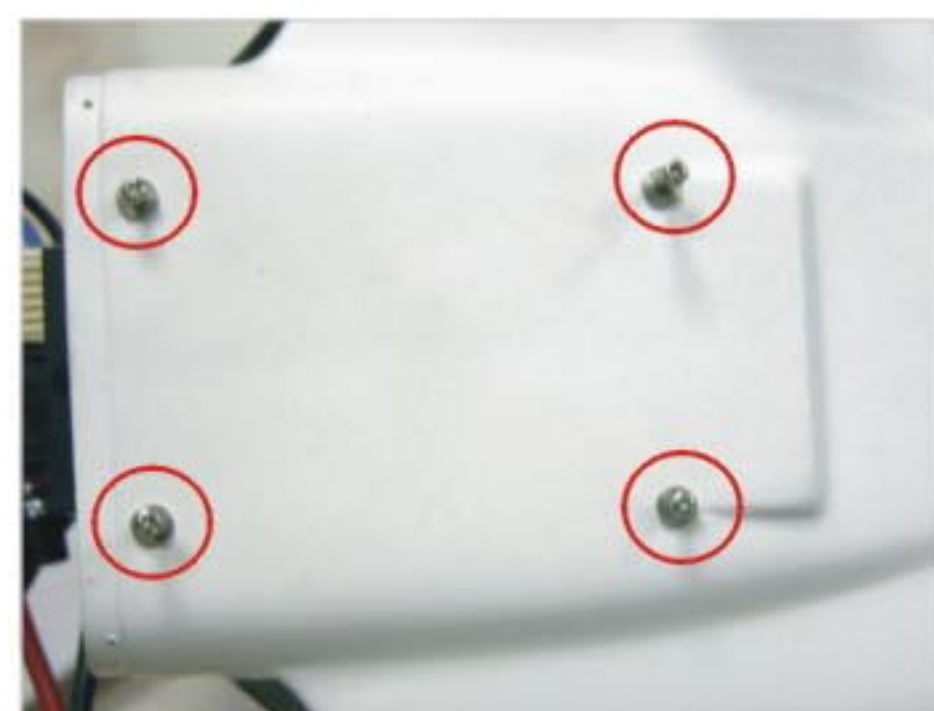


10. 把飞机电池架四个孔位对住机壳四个孔位 <注意: 先用手钻把机壳四个孔位钻大到2mm>  
Please Aim at the four holes of battery hanger to the four holes of cabin. (Remarks: Widen the holes of cabin to 2mm by hand drill.)

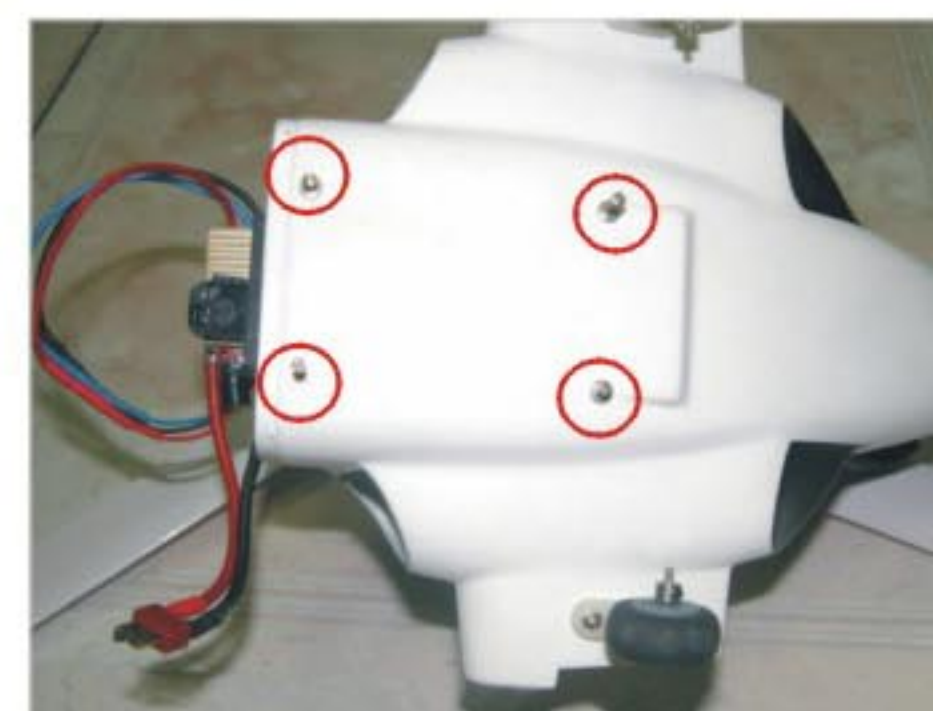

11. 用十字螺丝套上介子装进电池架, 再用螺母锁紧螺丝 (螺丝: 2\*25, 4个)  
Insert the crossing screws covered with penetron into battery hanger, then lock the screws by nut. (Screw: 2\*25, 4pcs)

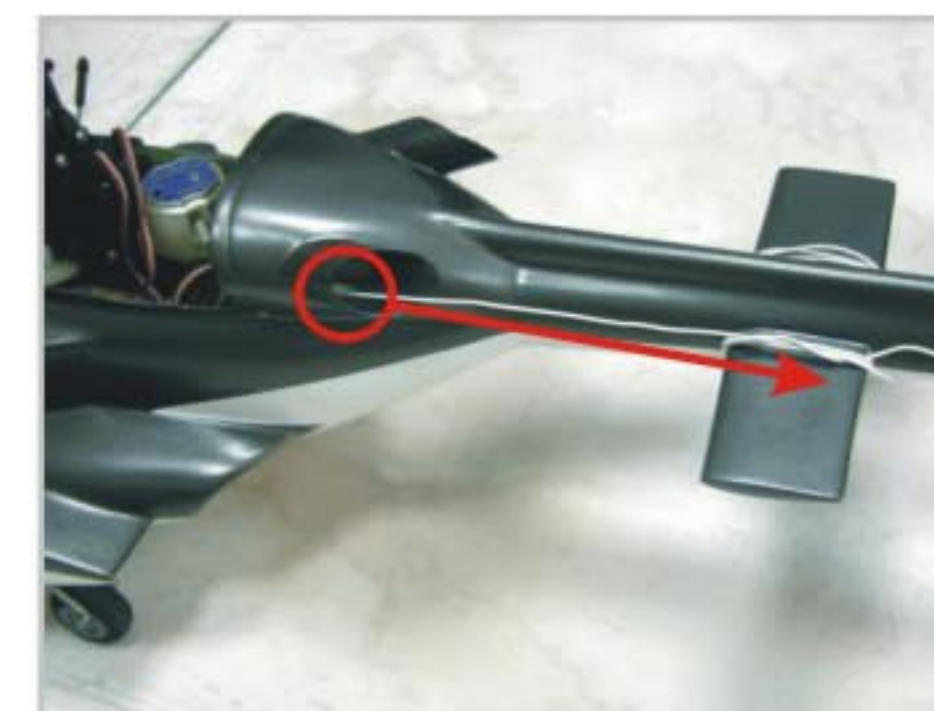

12. 把接收机天线从机壳后面孔位拉出来绕在平尾上  
Pull out the receiver antenna from the back hole of cabin, then enlance them on the edge tail.

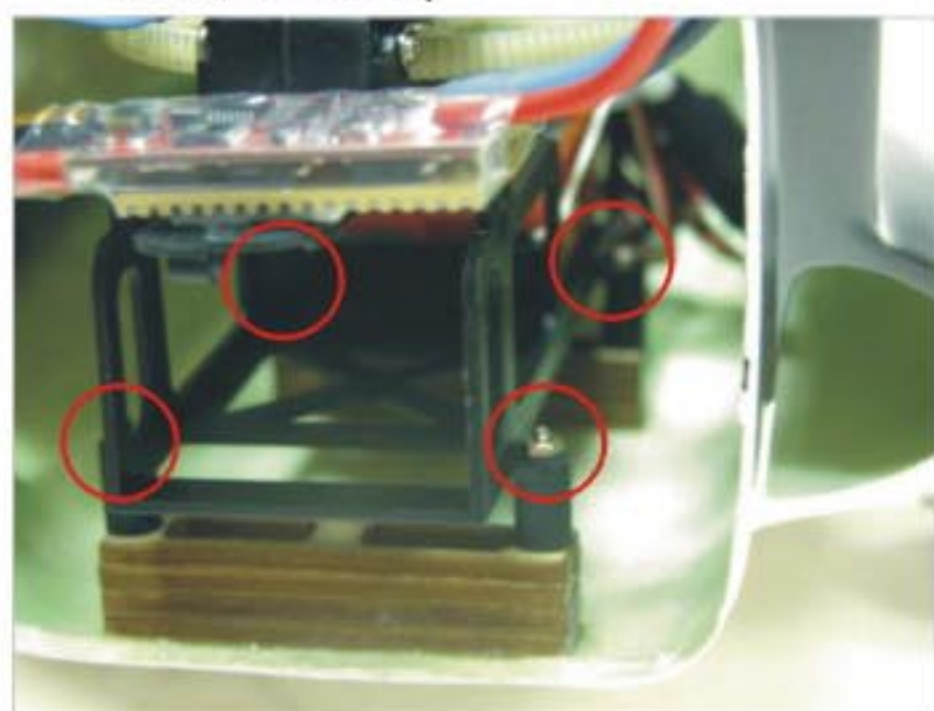

13. 用螺母锁紧  
Lock tightly by nut.



14. 把座舱用自攻螺丝装好在机壳头罩上, 然后把机壳头罩套上 (螺丝: 1.4\*5, 4个)  
Fix the engine room on the canopy by self-threading screws, then cover the canopy (Screw: 1.4\*5)



15. 用自攻螺丝锁住机壳头罩 (螺丝: 1.4\*5, 6个) <注意: 在锁螺丝之前先钻好1mm的孔位, 再锁螺丝>  
Lock the cabin by self-threading screws (Screw: 1.4\*5, 6pcs) (Remarks: Drill 1mm holes before locking the screws.)



16. 把机壳尾巴套上  
Cover the tail boom of cabin.



17. 用自攻螺丝锁住 (螺丝: 1.4\*5, 3个)  
Lock by self-threading screws (Screw: 1.4\*5, 3pcs)




18. 把垂尾用自攻螺丝装在机壳尾巴上 (螺丝: 2\*10, 2个)  
Fix the vertical tail on the tail of cabin by self-threading screws. (Screw: 2\*10, 2pcs)



19. 把飞机主转旋头钮下  
Rive off the center hub set of helicopter



20. 把机壳盖子装上, 用自攻螺丝锁上 (螺丝: 1.4\*5, 4个)  
Install the lid of cabin, then lock them by self-dreading screws (Screw: 1.4\*5, 4pcs)

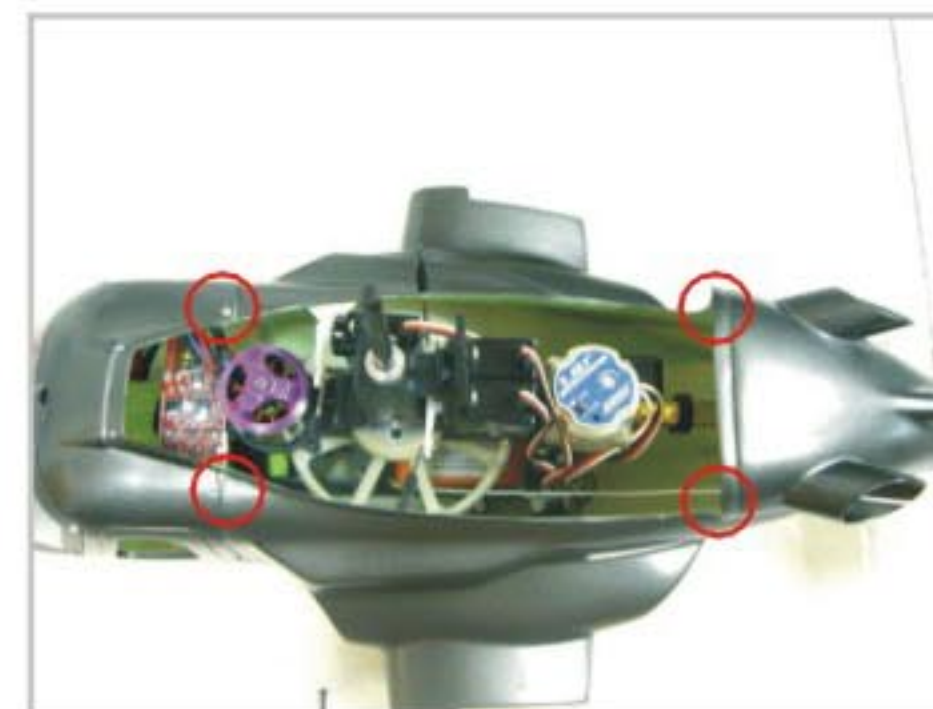

21. 机壳盖子锁好以后就把主转旋头装上锁住。  
Inset the center hub set after tightly locking the lid of cabin, then lock it.



**EK4-0057**



658\*204.5\*132mm

**EK4-0055**



667\*216.5\*131.5mm

**EK4-0052**



587.5\*183\*118mm

**EK4-0050**



586\*190\*118mm




1. 把机壳平尾用AB胶粘上  
glue the edge tail of cabin with AB glue.



2. 把轮子套上起落架，用轮锁锁住  
Hitch the wheel to the undercarriage, then lock them.



3. 把前起落架装上机壳头罩下部，用自攻螺丝和压片锁住（螺丝：2\*10，2个；压片：2\*10mm，1个）<注意：钮住压片时要用手钻钻好1.5的孔位>  
Insert the undercarriage(front) into the nether of canopy, then lock them by self-threading screws and flat sheet. (Screw: 2\*10, 2pcs; Flat sheet: 2\*10mm, 1pcs) (Remarks: Drill 1.5mm hole by hand drill before locking the flat sheet.)

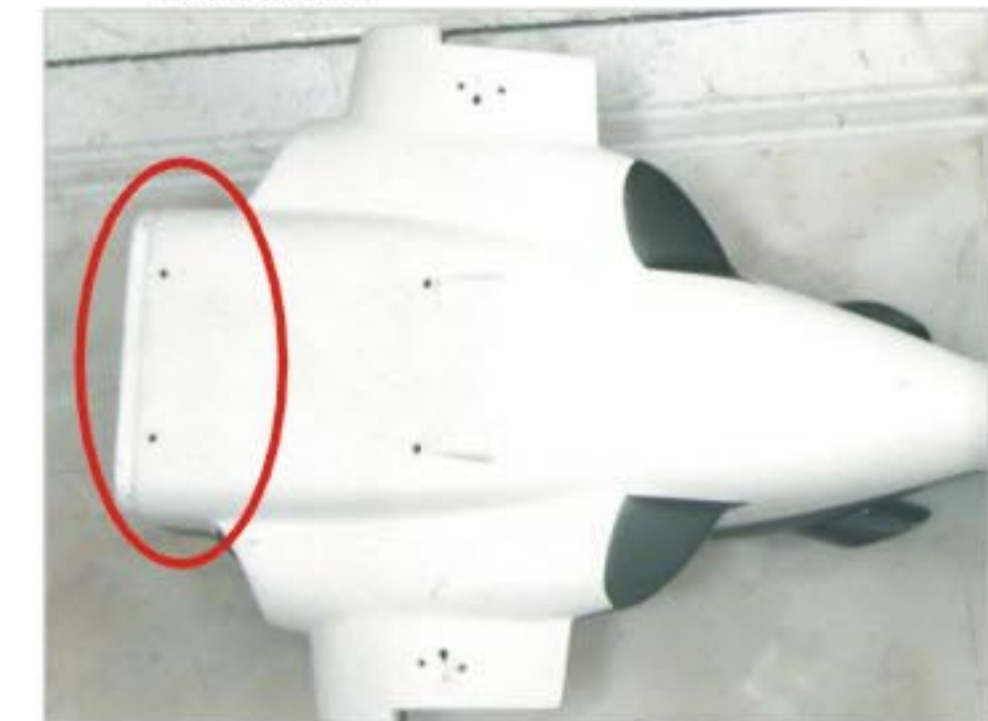

4. 把后起落架装上  
Install the back undercarriage.

5. 用自攻螺丝和压片锁住（螺丝：2\*10mm，2个；压片：21\*10mm，1个）

Lock the back undercarriage by self-threading screws and flat sheet. (Screw: 2\*10mm, 2pcs; Flat sheet: 21\*10mm, 1pcs)



6. 把后起落架左右后轮都锁好  
Lock the left/right & rear wheel of back undercarriage tightly.



7. 把飞机滑撬和尾箱钮下装进机壳  
<注意：尾拉杆也要取下>  
Insert the landing skid and button of tail box. (Remarks: Please remove the tail push link as well.)