

## ESKY像真机壳说明书

## SCALE CABIN

## SCALE CABIN

## Product introduction:

1. Complete fibre material, strike-tolerable.
2. Baking varnish manufactured with fine appearance.
3. Transparent windshield, authentic/veritable and beautiful.
4. Crane attached, probability and practical which makes the takeoff and landing more stable.

## Specification:

EK4-0060 (green) / EK4-0061 (red)  
 Recommend model:  
 ESKY EK1H-E013/EK1H-E014/EK1H-E015  
 Length: 688mm  
 high: 132mm  
 wide: 204.5mm

## 产品介绍:

1. 全玻璃纤维材质，耐冲击。
2. 烤漆制作，外观精美。
3. 全透明挡风窗，真实，美观。
4. 特配升降架，像真实用，让起飞下降更加稳定。

## 产品规格:

产品型号: EK4-0060 (绿色) / EK4-0061 (红色)  
 推荐适用机型:  
 ESKY EK1H-E013/EK1H-E014/EK1H-E015  
 机身长: 688mm  
 机身高: 132mm  
 机身宽: 204.5mm

## 包装展示图 Packing



包装盒: 734\*230\*140mm  
 package: 734\*230\*140mm

EK4-E0060

EK4-0061

一个包装盒里面只有一款像真机!

There is only one scale cabin in a gift box!



- EK4-0060(绿色)与EK4-0061 (红色) 的安装步骤相同。
- The EK4-0061(green) one as EK4-0061(red) one.


**Let's beginning! >>>**

## 安装步骤 Assemble process




将整机试飞调试好。

Adjust the helicopter well and text the fly.

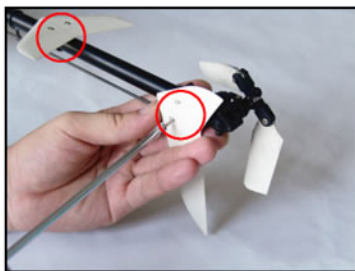


将平尾，垂尾，滑撬拆下。

Disassemble the tail paddle, and vertical fin and landing skit.

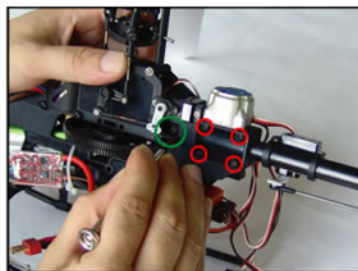


将尾管拆下。(舵机不要动)

Remove the tail boom (keep the servo stand still).

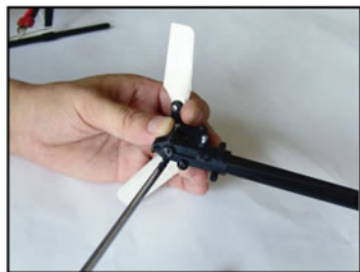

将尾箱拆下，拉杆取下。

Disassemble the tail box and remove the push-rod.

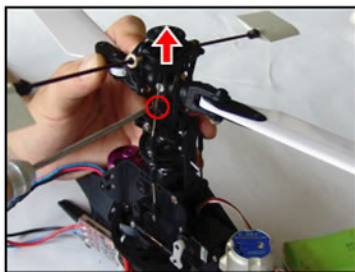

用六角螺丝刀将主旋转头拆下。

Disassemble the main swivel head with the hex screwdriver.



将起落架装在机壳底部。(前后起落架)

(自攻螺丝: 2\*10mm 2个)  
Assemble the front and rear undercar-riages at the bottom of the shell.  
(Self-tapping screw: 2\*10mm 2PCS)




将尾管装进机壳。

Put the tail boom into the shell.




将主机架放进机壳。

Put the main body into the shell.

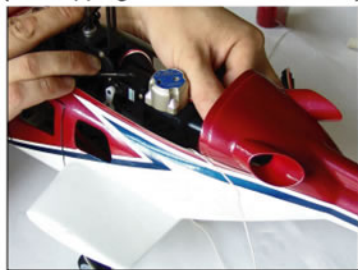

将主机架和尾管连接。

Connect the main body and the tail boom.

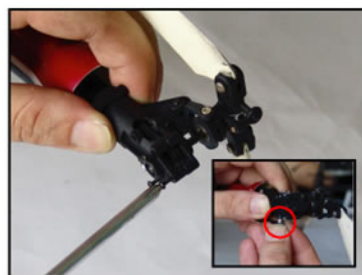

将尾箱和拉杆装上。

Assemble the tail box and the push-rod.



调整尾管后用十字螺丝刀拧紧。

Adjust the tail boom and tighten up with the Phillips screwdriver.



用螺丝把主机架固定在机壳上。

(螺丝: 2\*25mm 4个)

Fix the main body into the shell with screws. (Screw: 2\*25mm 4PCS)



把尾罩装上。

(自攻螺丝1.4\*5mm 3个)

Put on the tail cover. (Self-tapping screw: 1.4\*5mm 3PCS)



把仓盖装上。

(自攻螺丝1.4\*5mm 4个)

Cover the hatch. (Self-tapping screw: 1.4\*5mm 4PCS)



把主旋转头装上锁住。

Assemble the main swivel head and lock it up.



把座仓装上。

(自攻螺丝: 1.4\*5mm 2个)

Assemble the cabin. (Self-tapping screw: 1.4\*5mm 2PCS)



把水平尾翼用AB胶粘好。

Stick up the tail paddle with AB glue.



把垂直尾翼装上。

(自攻螺丝: 2\*10mm 2个)

Assemble the vertical fin. (Self-tapping screw: 2\*10mm 2PCS)



把接收机天线绑好在平尾上。

Tie up the receiver antenna on the tail paddle.